


Lift Off Installation and Removal Instructions




Step 1. Remove the clamps and insert the Ridgeback lifting jacks.

For safety please allow 100mm to 200mm from the tray to the jack upright.

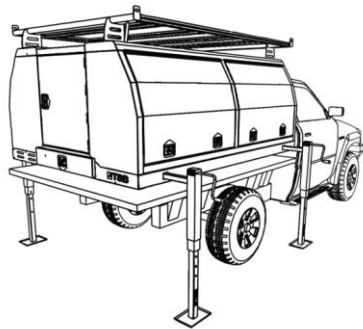


Step 2. Begin raising the jacks, ensuring you walk around and lift a section at a time in small increments and relatively level at all times

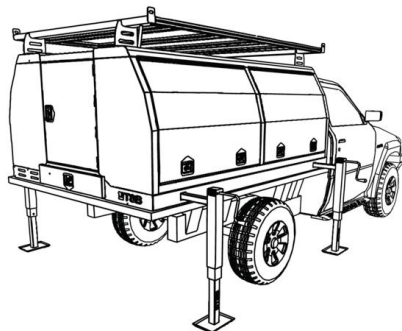

Step 3. Raise the service body 100mm to 200mm from the tray

Now you can safely drive the vehicle forward. Please ensure you take care and drive in a straight line to clear the Ridgeback service body

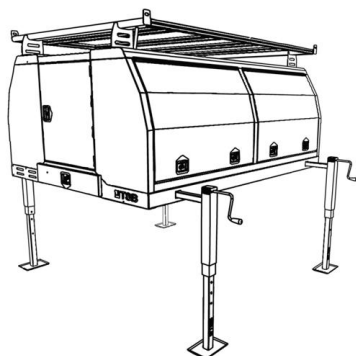

Please Note: We suggest that you remove the service body on level ground. The Ridgeback lifting jacks have been tested and will work with an empty service body up to an angle of 30 degree angle. Ridgeback lifting jacks are rated 1000kg each